



MODEL: FPX-9100 TIRE INFLATOR GAUGE


Operating Instructions, Parts List & Warranty

INSTRUCTIONS

Use the FPX-9100 Tire Inflator Gauge to inflate tires to the optimal pressure level.

1. Thread one of the NPT connectors to the bottom of the tire gauge.
2. Connect the FPX Inflator Gauge to an air compressor using the NPT connector.
3. Press the Air Bleed Valve/Reset Button to ensure the gauge is set to Zero.
4. Connect an Air Chuck to the rubber hose. Use the chuck to connect to the tire valve.
5. Fill by pressing the Valve Controller to desired pressure level.
6. Release excess air using the Air Bleed Valve/Reset Button.

Exploded View & Parts List

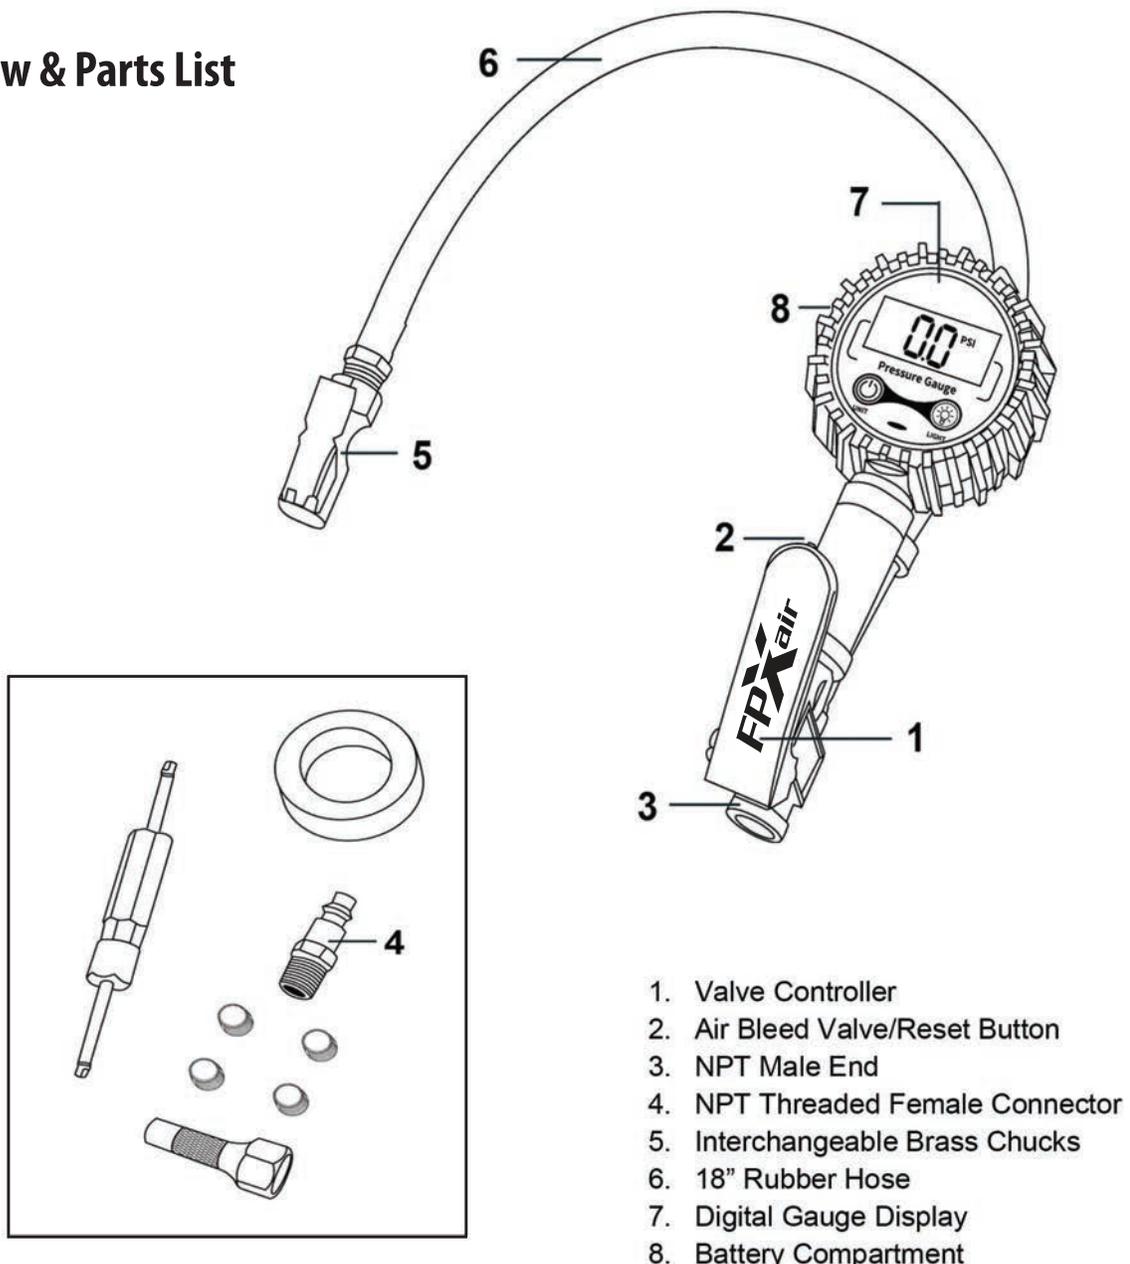

1. Valve Controller
2. Air Bleed Valve/Reset Button
3. NPT Male End
4. NPT Threaded Female Connector
5. Interchangeable Brass Chucks
6. 18" Rubber Hose
7. Digital Gauge Display
8. Battery Compartment

* Requires 2 AAA Batteries (not included)



MODEL: FPX-9100 TIRE INFLATOR GAUGE

SPECIFICATIONS

Inflation Range: 0-250 PSI

Accuracy: $\pm 1\%$

Display Resolution: 0.1 PSI

Display Type: Backlit LCD

Measurement Units: PSI, KPA, Bar, Kg/cm²

Compatibility: NPT air compressor connector



WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS, INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to www.P65Warnings.ca.gov

ADVERTENCIA: ESTE PRODUCTO PUEDE EXPONERLO A SUSTANCIAS QUÍMICAS, ENTRE ELLAS PLOMO, QUE EL ESTADO DE CALIFORNIA RECONOCE COMO CAUSANTE DE CÁNCER, MALFORMACIONES CONGÉNITAS U OTROS DAÑOS AL SISTEMA REPRODUCTOR. Para más información, visita www.P65Warnings.ca.gov

WARRANTY

Florida Pneumatic Manufacturing Corporation warrants its tools to be free from defects in materials and workmanship for a period of 30 days. Tools thought to be defective should be returned to the factory, or an authorized service center, transportation charges prepaid, for examination and consequent repair or replacement. This warranty does not cover damage to tools arising from alteration, abuse, or use for other than their intended purpose and does not cover any repairs or replacement made by anyone other than Florida Pneumatic Manufacturing Corporation or its authorized repair stations.



The duration of the Warranty and any other Warranty including, but not limited to, any implied Warranty of merchantability is expressly limited to 30 days, beginning from the date of the delivery to the original user. The obligation of Florida Pneumatic Manufacturing Corporation under any Warranty, express or implied, is limited solely to the repair or replacement at its factory or authorized repair station of any part which shall prove defective.